


FRONT VIEW
HANDLE SHOWN IN ON POSITION

NOTE: PURGE GAS INLET = 1/2-14 FNPT

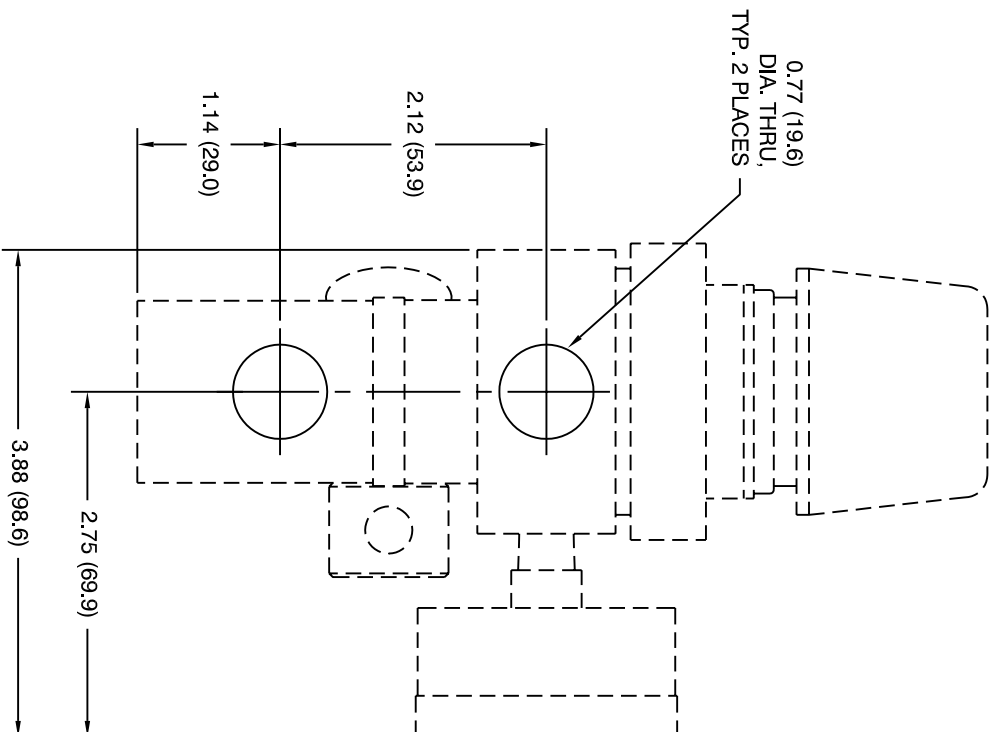

SIDE VIEW
HOLE PATTERN

REV #	ECO #	CHANGE(S) DESCRIPTION		DATE	CHANGE BY	APPD BY	
<p>The contents of this drawing is the sole property of Purge Solutions. This print and/or its contents shall not be traced or reproduced without prior written permission from Purge Solutions. It shall not be used directly or indirectly in any way detrimental to the interest of Purge Solutions.</p>		<p>DO NOT SCALE DRAWING UNLESS OTHERWISE SPECIFIED: Dimensions are in inches Dimensions in () are in mm Tolerances: X = ± 0.015 (0.38) .XX = ± 0.010 (0.25) .XXX = ± 0.005 (0.13) Angular = ±0.5° Break All Sharp Edges 63 Minimum Except As Noted</p>		<p>DRAWN: WJT DATE: 31/OCT/05</p> <p>CHECKED: WJT DATE: 31/OCT/05</p> <p>APPROVED: WJT DATE: 31/OCT/05</p>		<p>TITLE: OEM FAST DILUTION AIR INLET KIT HOLE MOUNTING PATTERN</p> <p>PART & DWG #: PSO-OEMFD</p> <p>SHEET 1 OF 1</p> <p>SCALE: N/A DWG SIZE A FINISH: N/A</p>	
		<p>WEBSTER, TEXAS, USA 832-368-7166</p>					